



SINGLE RECTIFIER - RECT O VERB (Series 1)

FRONT PANEL

CHANNEL 1		
Control Function	Type	Mesa Part#
Clean/Pushed	Switch	607101
Gain	Pot	593792
	Knob	408120
Treble	Pot	593148
	Knob	408120
Middle	Pot	592378
	Knob	408120
Bass	Pot	593148
	Knob	408120
Presence	Pot	593737
	Knob	408120
Master	Pot	592738
	Knob	408120
Green LED	LED	395438

CHANNEL 2		
Control Function	Type	Mesa Part#
Vin/Mod Gain	Switch	607101
Gain	Pot	592794
	Knob	408120
Treble	Pot	592738
	Knob	408120
Middle	Pot	593737
	Knob	408120
Bass	Pot	593739
	Knob	408120
Presence	Pot	593150
	Knob	408120
Master	Pot	593739
	Knob	408120
Red LED	LED	395520

MISC PARTS		
Control Function	Type	Mesa Part#
Input	Jack	610120
Output	Pot	593148
	Knob	408121
Solo	Pot	593148
	Knob	408121
Pilot Light	Light	703047
	Lens	703782
	Light Holder	703822
Standby	Switch	601073
Power	Switch	601073

REAR PANEL			
MISC PARTS			
Control Function	Type	Mesa Part#	
Channel Select	Switch	602112	
Reverb (2)	Pot	593151	
	Knob	408121	
FX Loop	Mix Level	Pot	593736
		Knob	408121
	Return Send	Jack	610111
		Jack	610111
Speaker Outs(3)	Jack	618100	
Slave	Jack	618100	
AC Receptacle	Jack	613713	
Fuse Holder	Domestic	Cap/Holder	790347
		Fuse	790250
	Export	Cap/Holder	790346
		Fuse	795101
Footswitch	Jack	613615	

SINGLE RECTIFIER - SOLO 50 (Series 1)

FRONT PANEL

CHANNEL 1		
Control Function	Type	Mesa Part#
Clean/Pushed	Switch	607101
Gain	Pot	593792
	Knob	408120
Treble	Pot	593148
	Knob	408120
Middle	Pot	592378
	Knob	408120
Bass	Pot	593148
	Knob	408120
Presence	Pot	593737
	Knob	408120
Master	Pot	592738
	Knob	408120
Green LED	LED	395438

CHANNEL 2		
Control Function	Type	Mesa Part#
Vin/Mod Gain	Switch	607101
Gain	Pot	592794
	Knob	408120
Treble	Pot	592738
	Knob	408120
Middle	Pot	593737
	Knob	408120
Bass	Pot	593739
	Knob	408120
Presence	Pot	593150
	Knob	408120
Master	Pot	593739
	Knob	408120
Red LED	LED	395520


MISC PARTS		
Control Function	Type	Mesa Part#
Input	Jack	610120
Footswitch	Jack	610123
Output	Pot	593148
	Knob	408121
Solo	Pot	593148
	Knob	408121
Pilot Light	Light	703047
	Lens	703782
	Light Holder	703822
Standby	Switch	601073
	Switch	601073

REAR PANEL			
MISC PARTS			
Control Function	Type	Mesa Part#	
Channel Select	Switch	602112	
FX Loop			
	Mix Level	Pot	593736
		Knob	408121
	Return	Jack	610111
Send	Jack	610111	
Speaker Outs (3)	Jack	618100	
Slave	Jack	618100	
AC Receptacle	Jack	613713	
Fuse Holder			
	Domestic	Cap/Holder	790347
		Fuse	790250
	Export	Cap/Holder	790346
	Fuse	795101	

MESA-BOOGIE SOLO 50


BLOCK DIAGRAM

FILE: SOL50BLK.S01

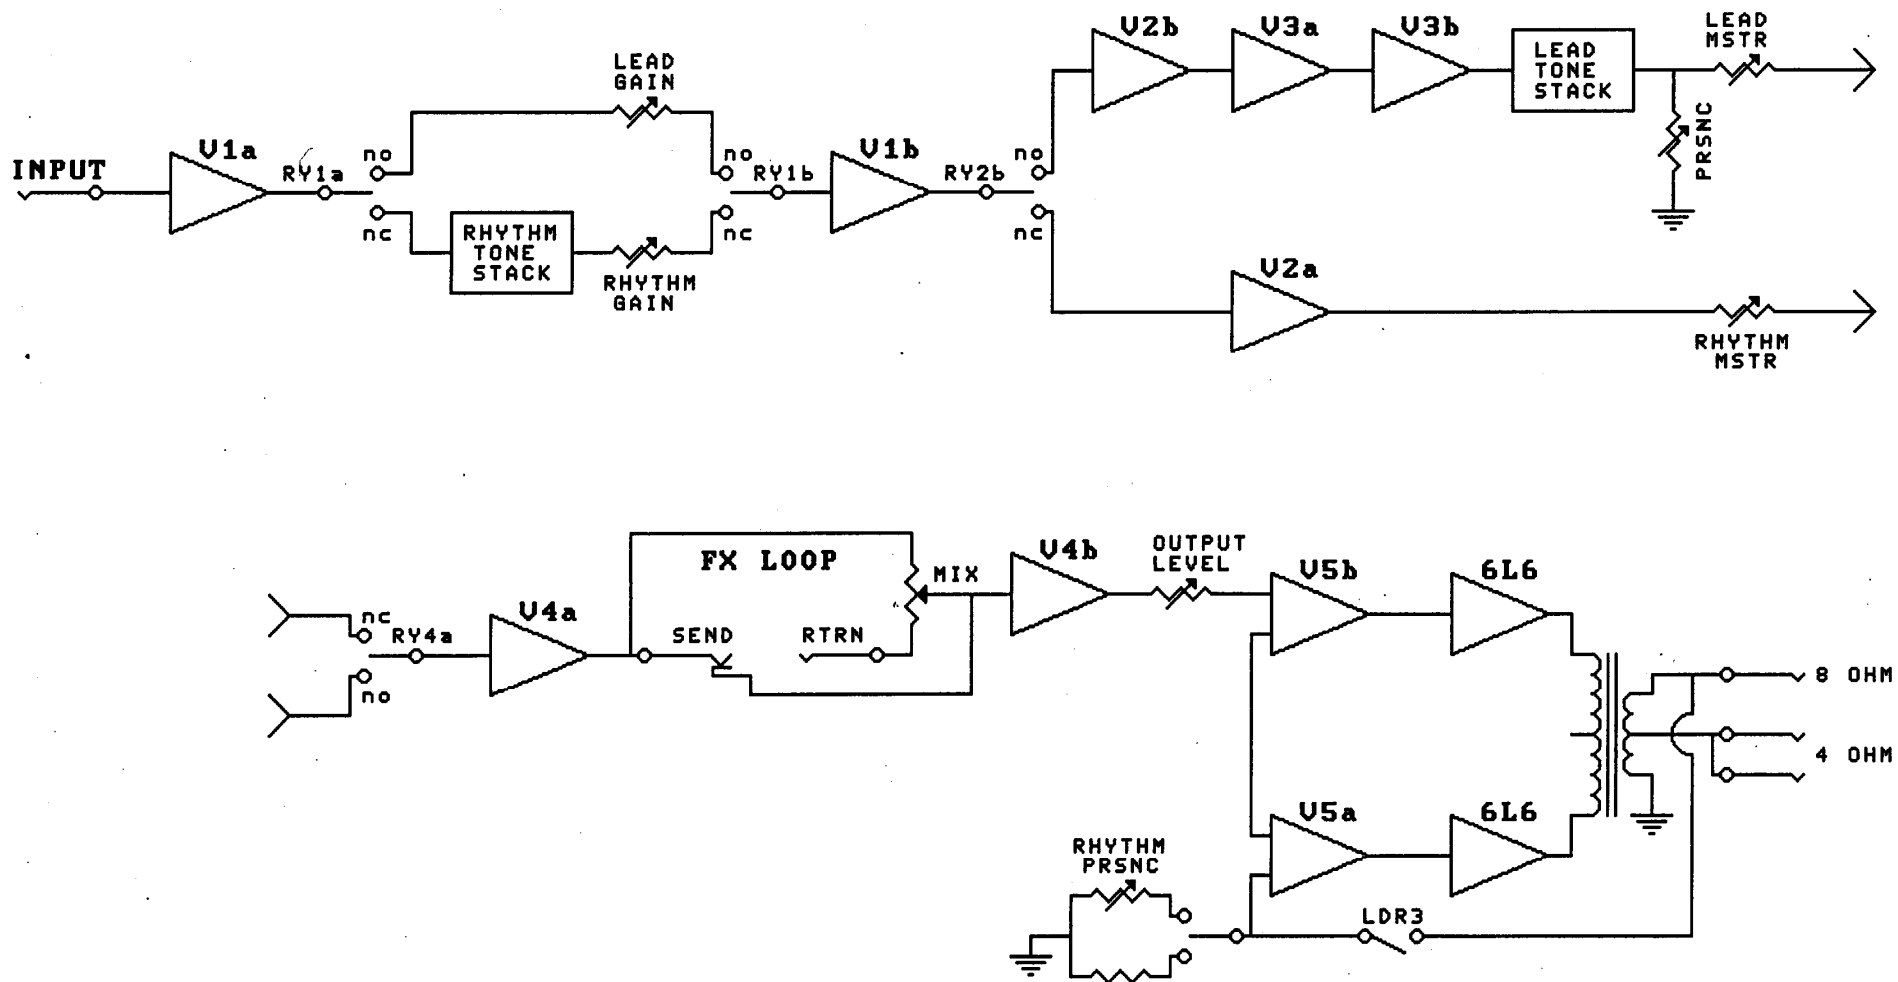

MESA-BOOGIE SOLO 50


POWER SUPPLIES
FILE REC50SUPP.S01

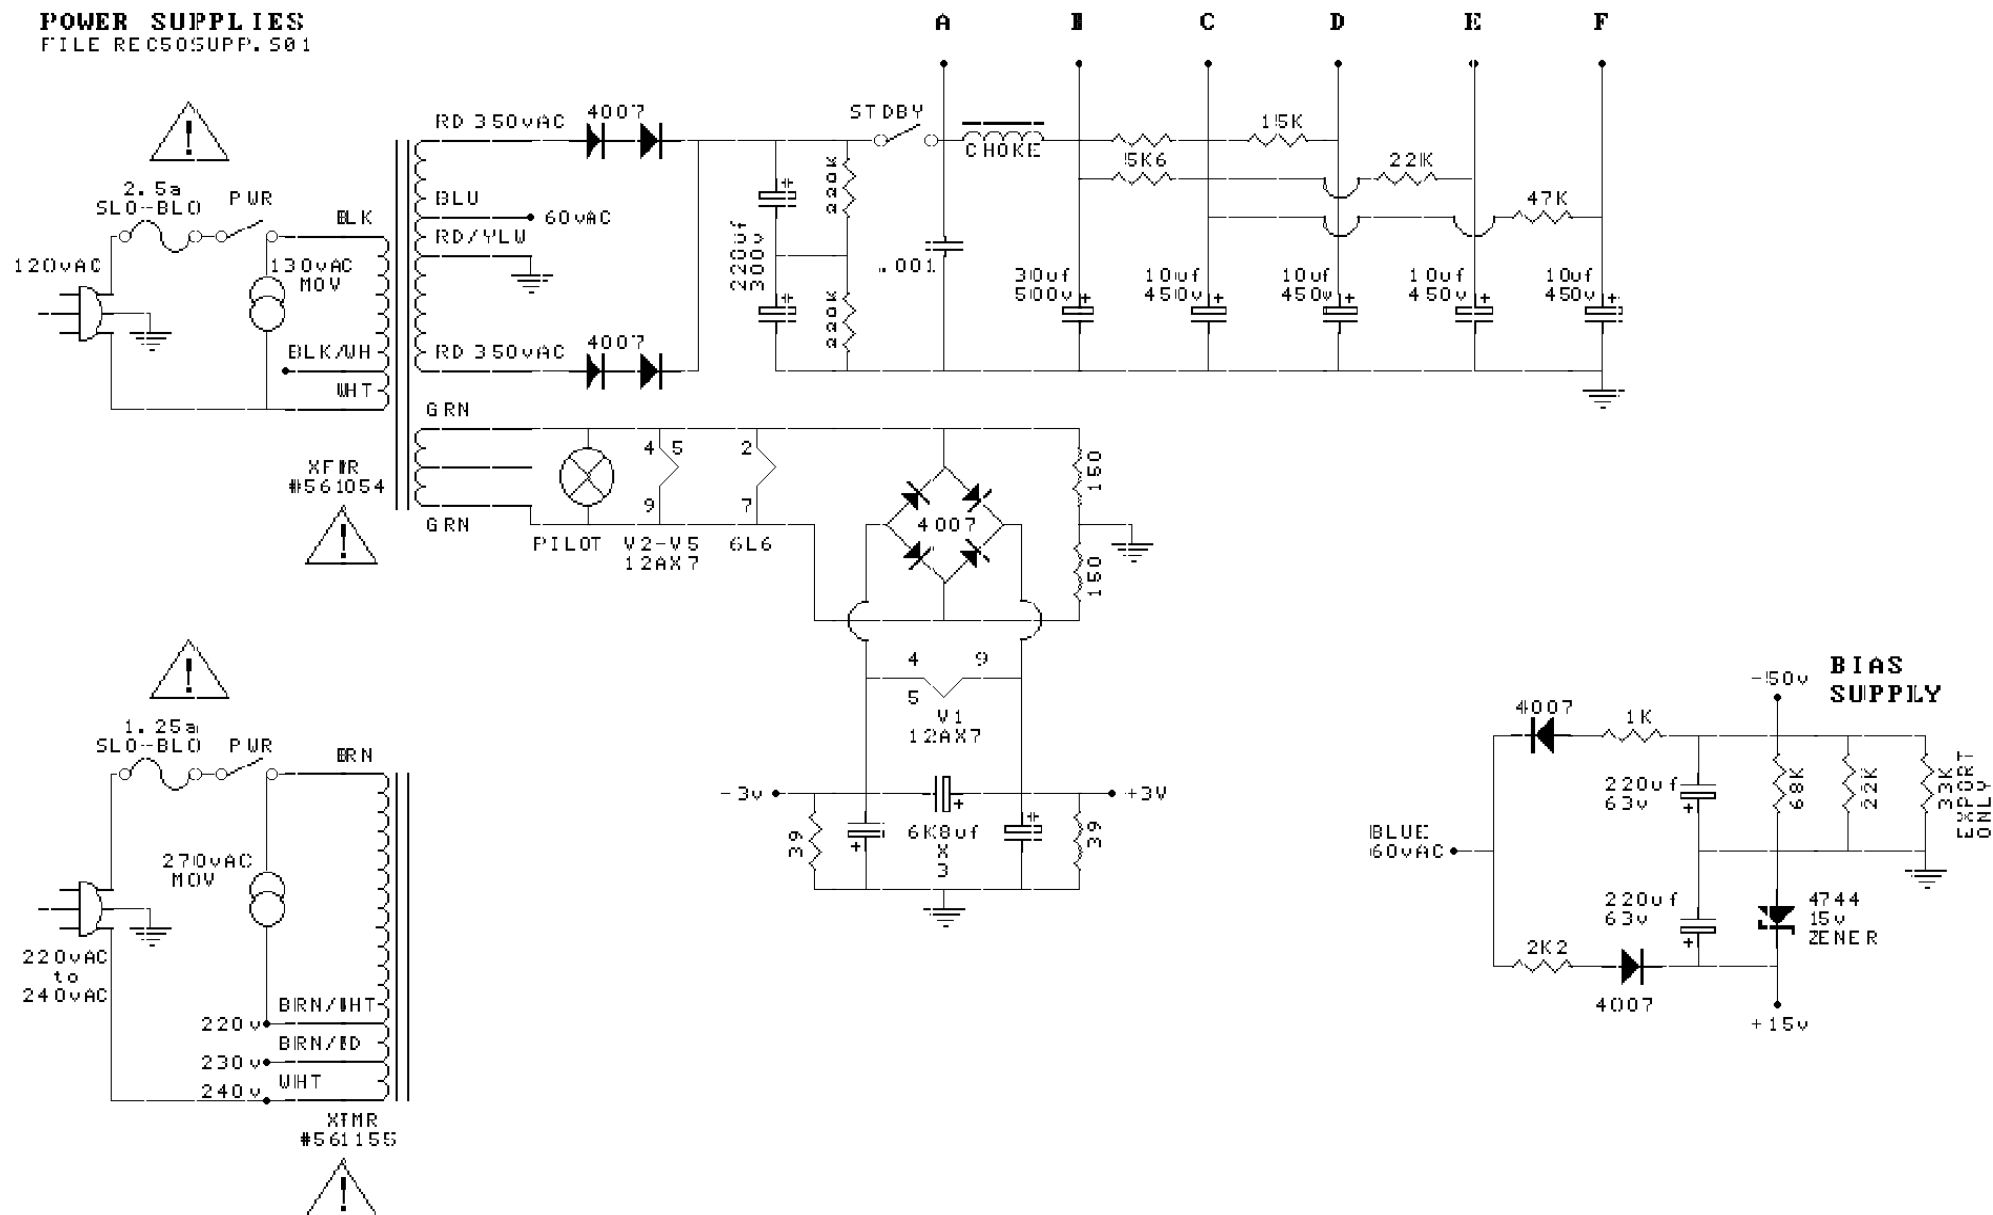

MESH-BUGGIE SOLO SO/RECTOVERB


PREAMP PT. 1

FILE: SOL50PRE.S01

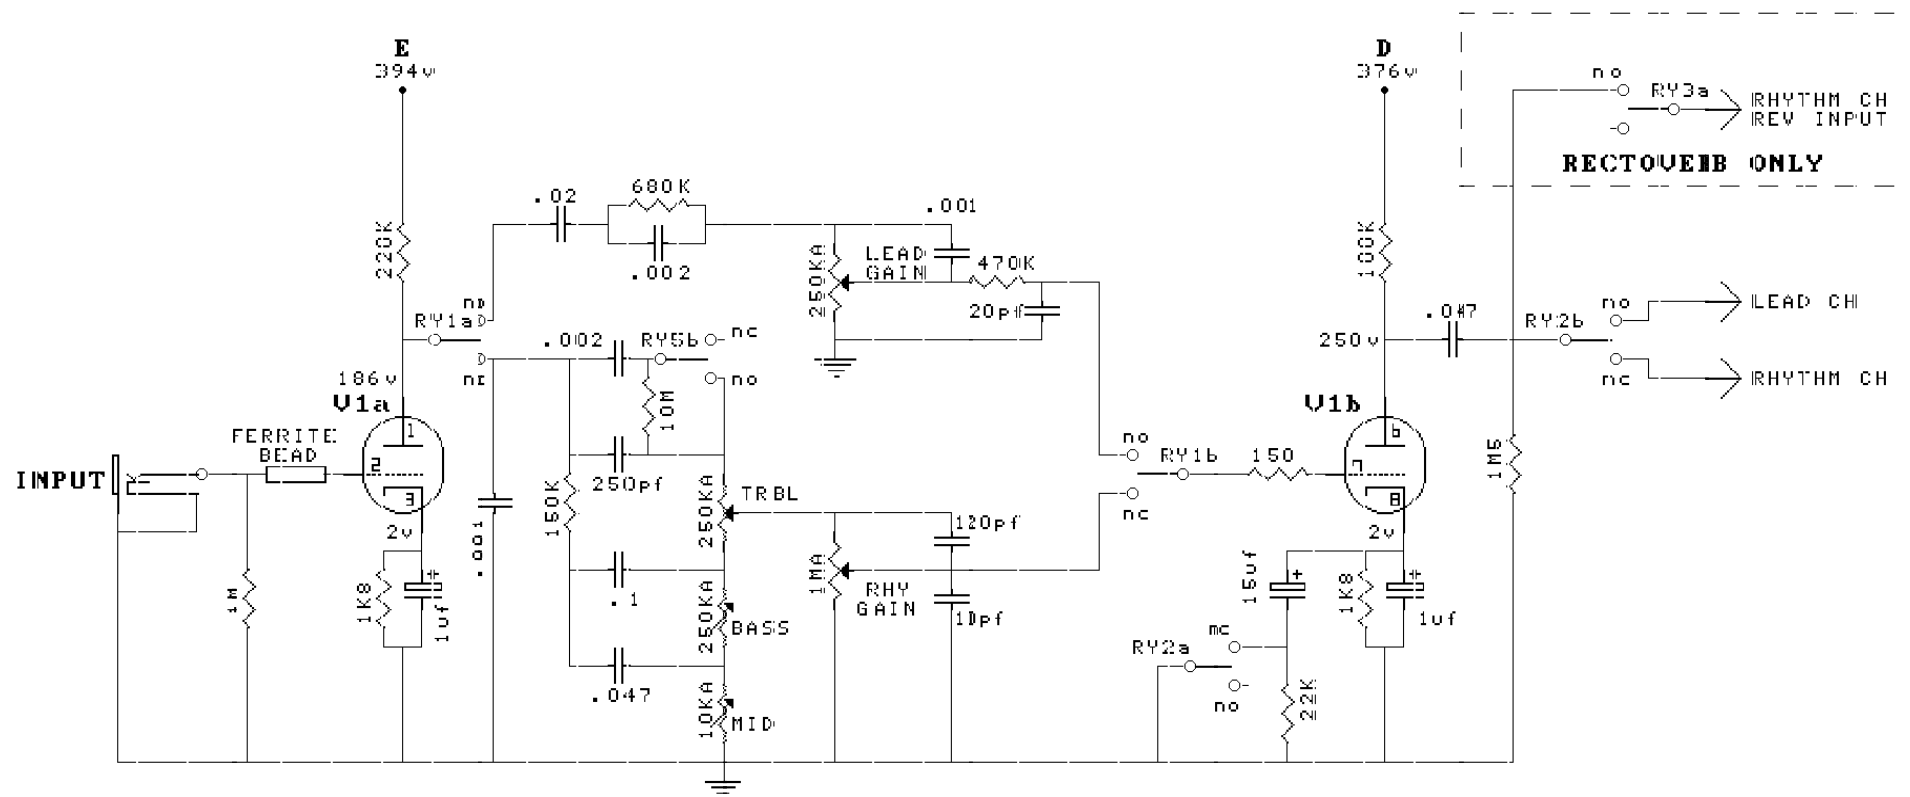

MESH-BOUGIE SOLO SO/RETOVERB

PREAMP PT.2
FILE: SOL50PR2

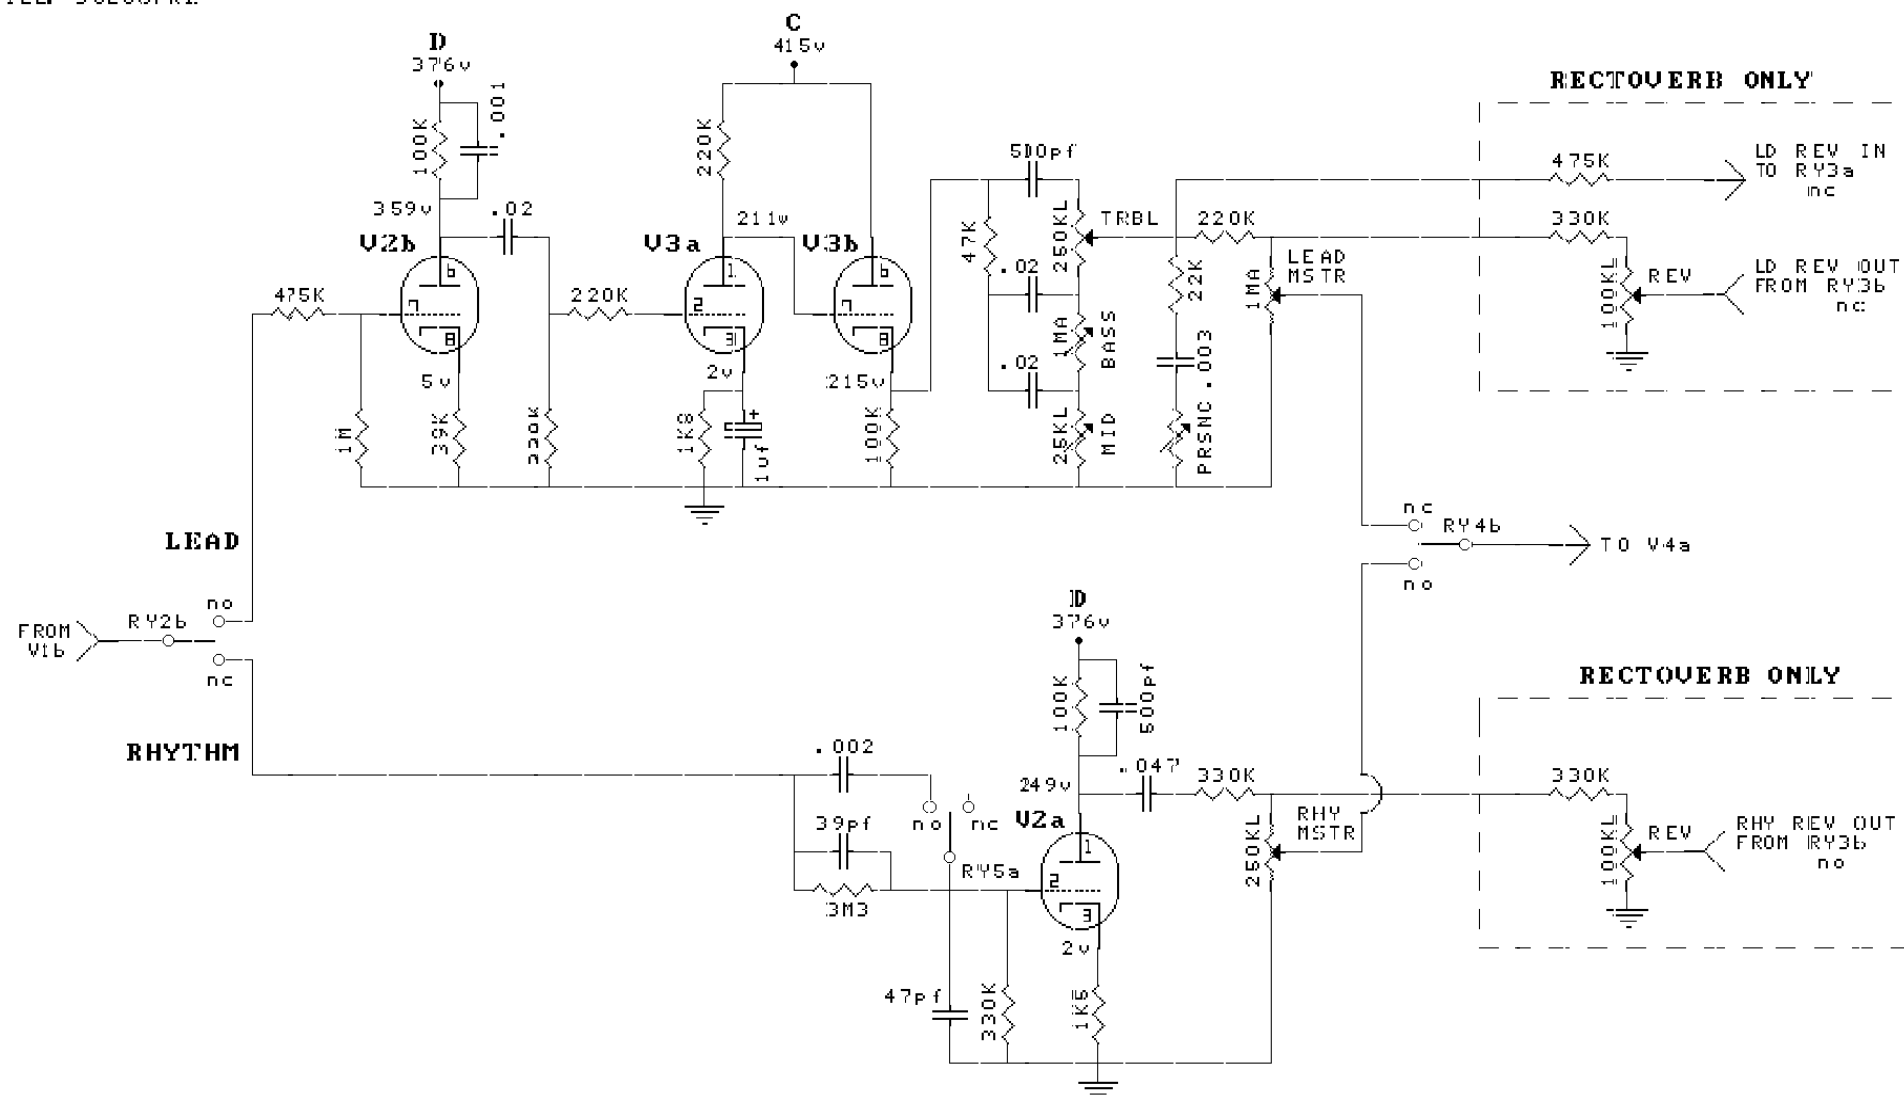


MESA-BOOGIE

SOLO SO/RECTOVERB

FX LOOP


FILE SOL50FX.S01

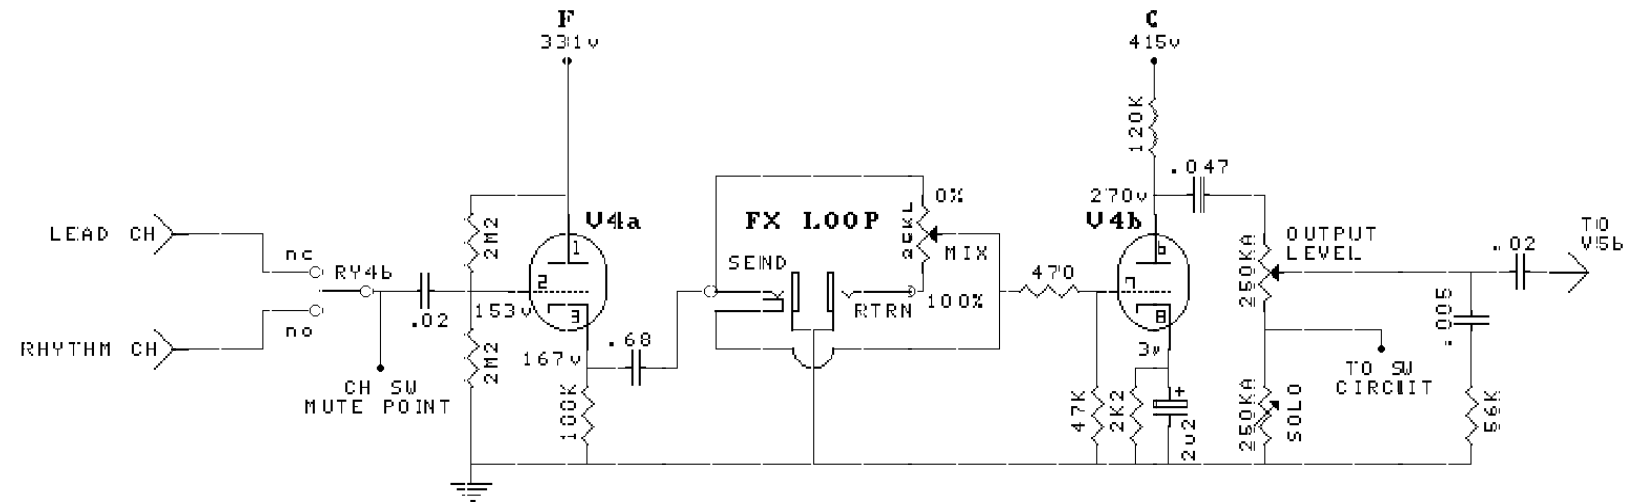

FILE RCTVR:BREV. S101



MESH-BOUGIE
 SOLO SO / RECTOVERB
 POWER AMP
 FILE: SOL50PWR.501

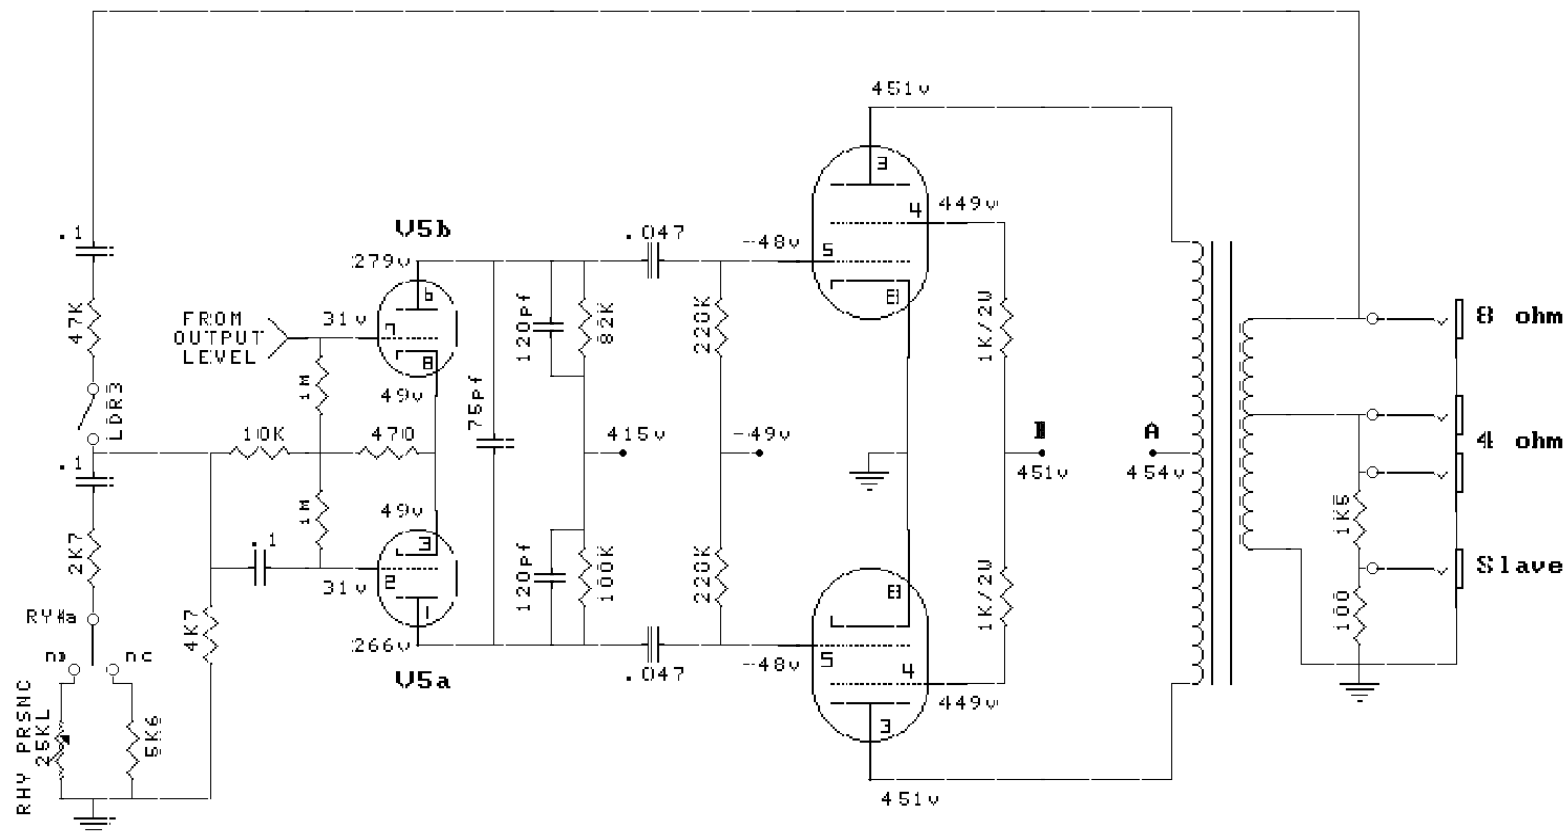

SOLO 50 / RECTOVERB
SWITCHING MATRIX
FILE SOL50/SW.S01

