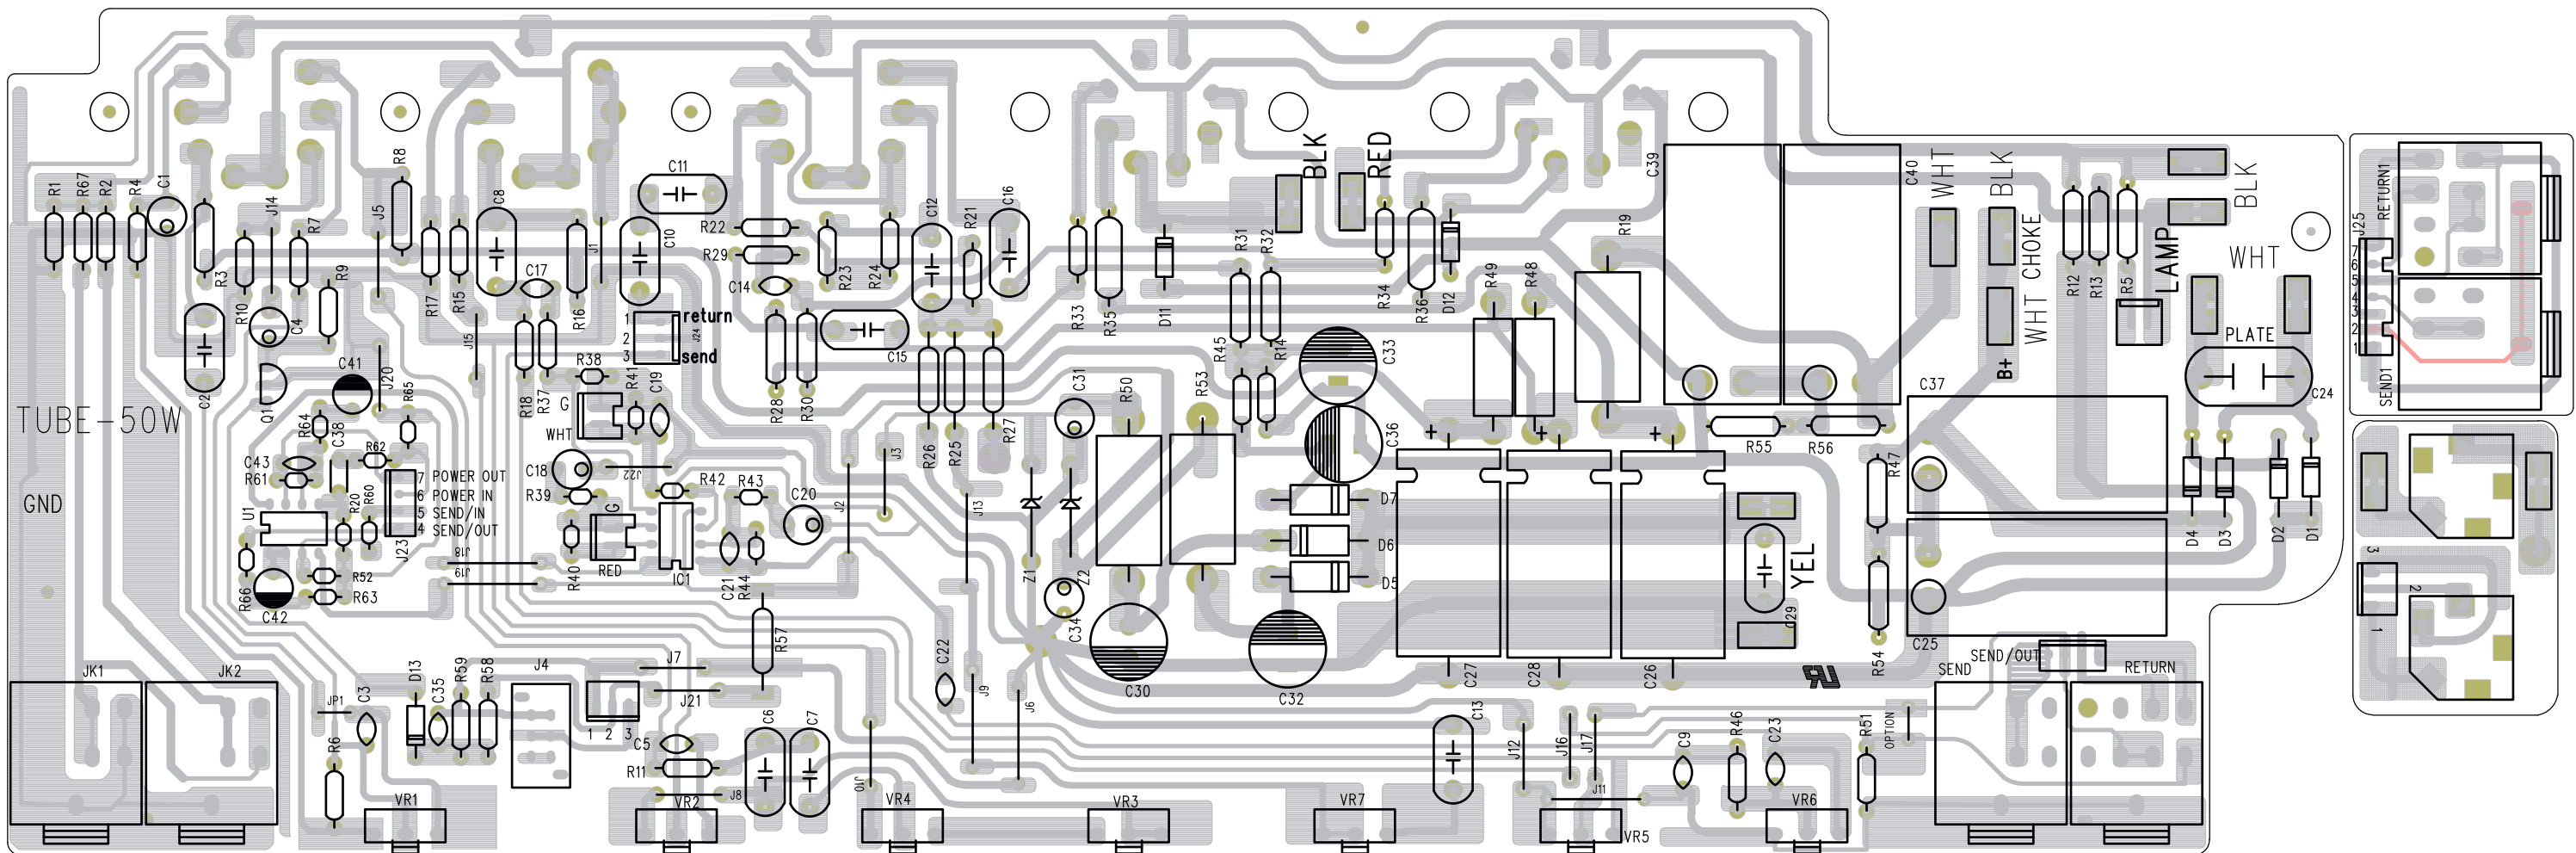


Guitar Amplifier

- INPUT** ----- Connection for instrument.
- GAIN** ----- Sets the amount of gain.
Higher settings provide more overdrive sound.
- TREBLE** ----- Provides high frequency equalization as required.
- MIDDLE** ----- Provides midrange equalization with cut and boost.
- BASS** ----- Provides desired amount of bass response.
- PRESENCE** ----- Controls the high frequency level of the signal.
- MASTER** ----- Adjusts the overall volume of either the "Clean" or "Drive" channels.
- REVERB** ----- Adjusts the amount of reverb added to the normal signal.
- STANDBY SWITCH** ----- Toggle this switch when turning the amp on. Wait 30 seconds, before switching out of standby mode to promote longer tube life.
- POWER SWITCH** ----- Turns amplifier ON & OFF.
- FOOT S/W** ----- For connection of a single button foot switch for boost select.

- ★ **SPECIFICATIONS** ★
- OUTPUT POWER** ----- 50W(RMS)
- DIMENSIONS** ----- 688(W)X757(H)332(D)mm Front 490x55mm
27.1"(W)X29.8"(H)13.1(D)mm
- AC POWER** ----- Shown in the back.
- TUBES** ----- 2X"6L6 Electro harmonix
3X"12AX7" Electro harmonix
- POWER CONSUMPTION** ----- 120W

WARNING --
Under no circumstances remove back panel of amplifier while connected to power.
Only serviceable by an authorised Strauss service agent.