
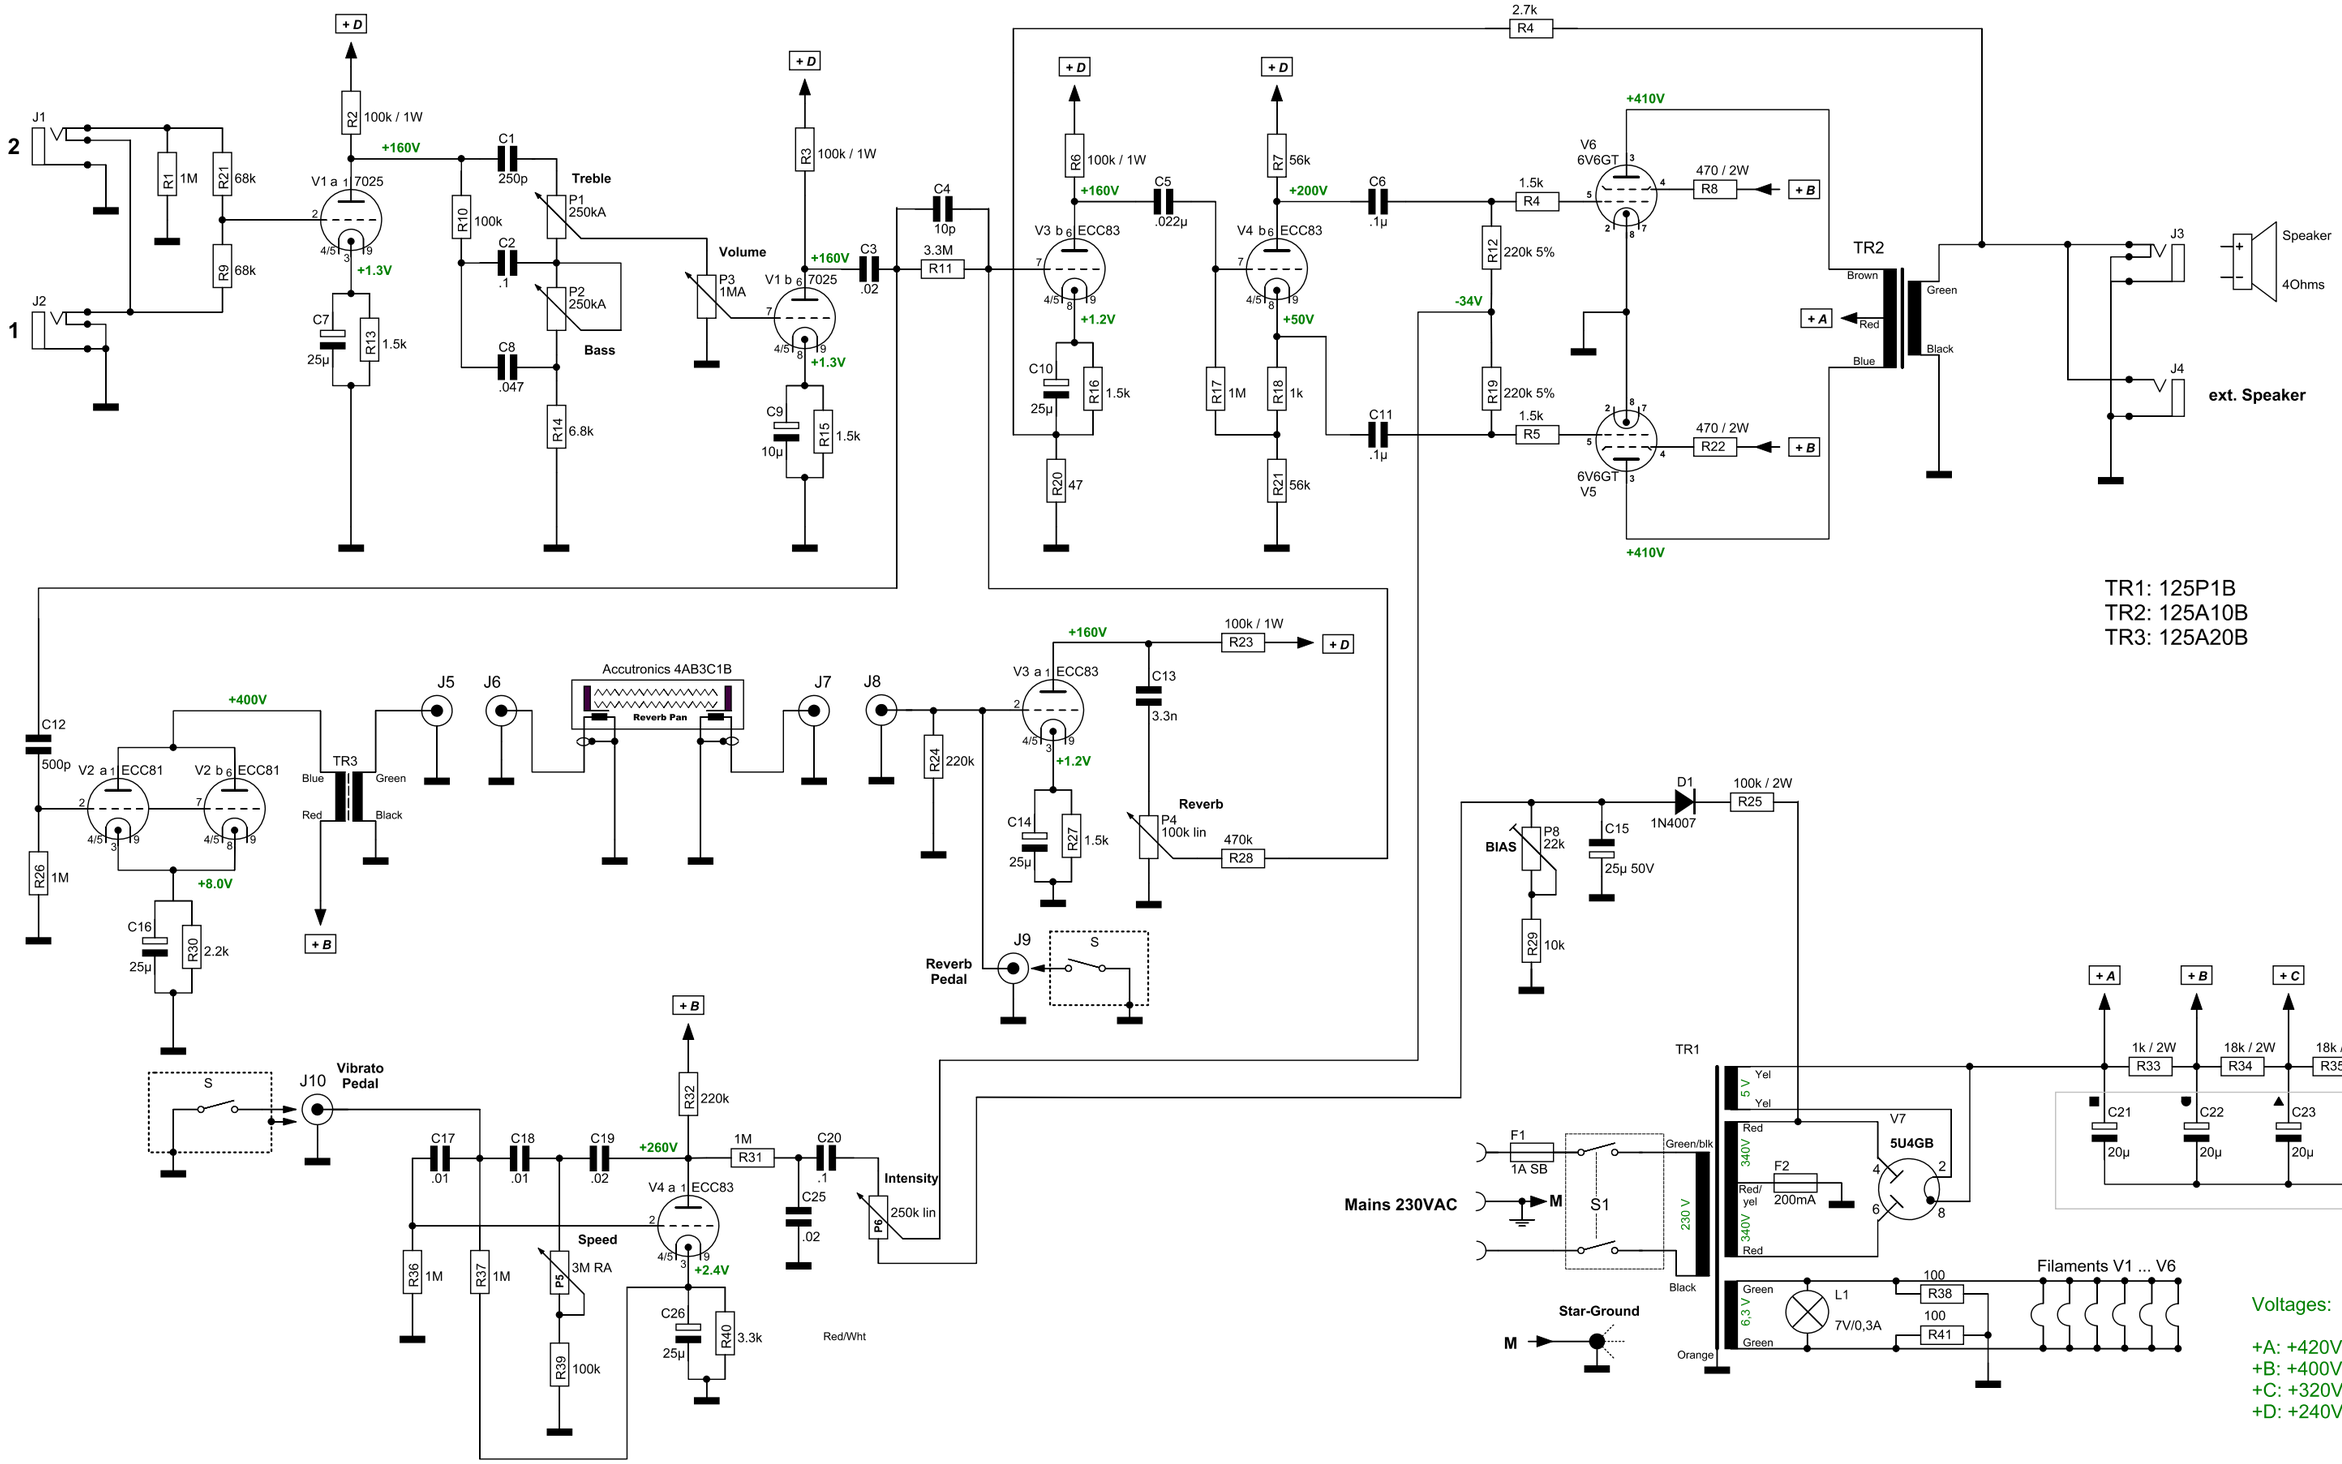



Note:

All resistors 1/2 Watt 10% tolerance, if not specified. All capacitors at 630 Volt rating, if not specified. Electrolytic capacitors attached to the cathodes are at least rated 25 Volt. Voltages read to ground with electronic voltmeter. Values shown may have a tolerance of + or - 10%.


12AX7,
7025, ECC81, ECC83

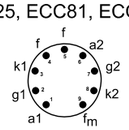


6V6GT





5U4GB




Princeton Reverb Amp Clone (AA1146)		
Sheet: Circuit-Diagram		
Code: BB2008	Document: princeton_reverb_docs.spl	Rev.: A5
Date: 11.12.2008	Last edit: 00:44:15	Sheet: 1 of 3

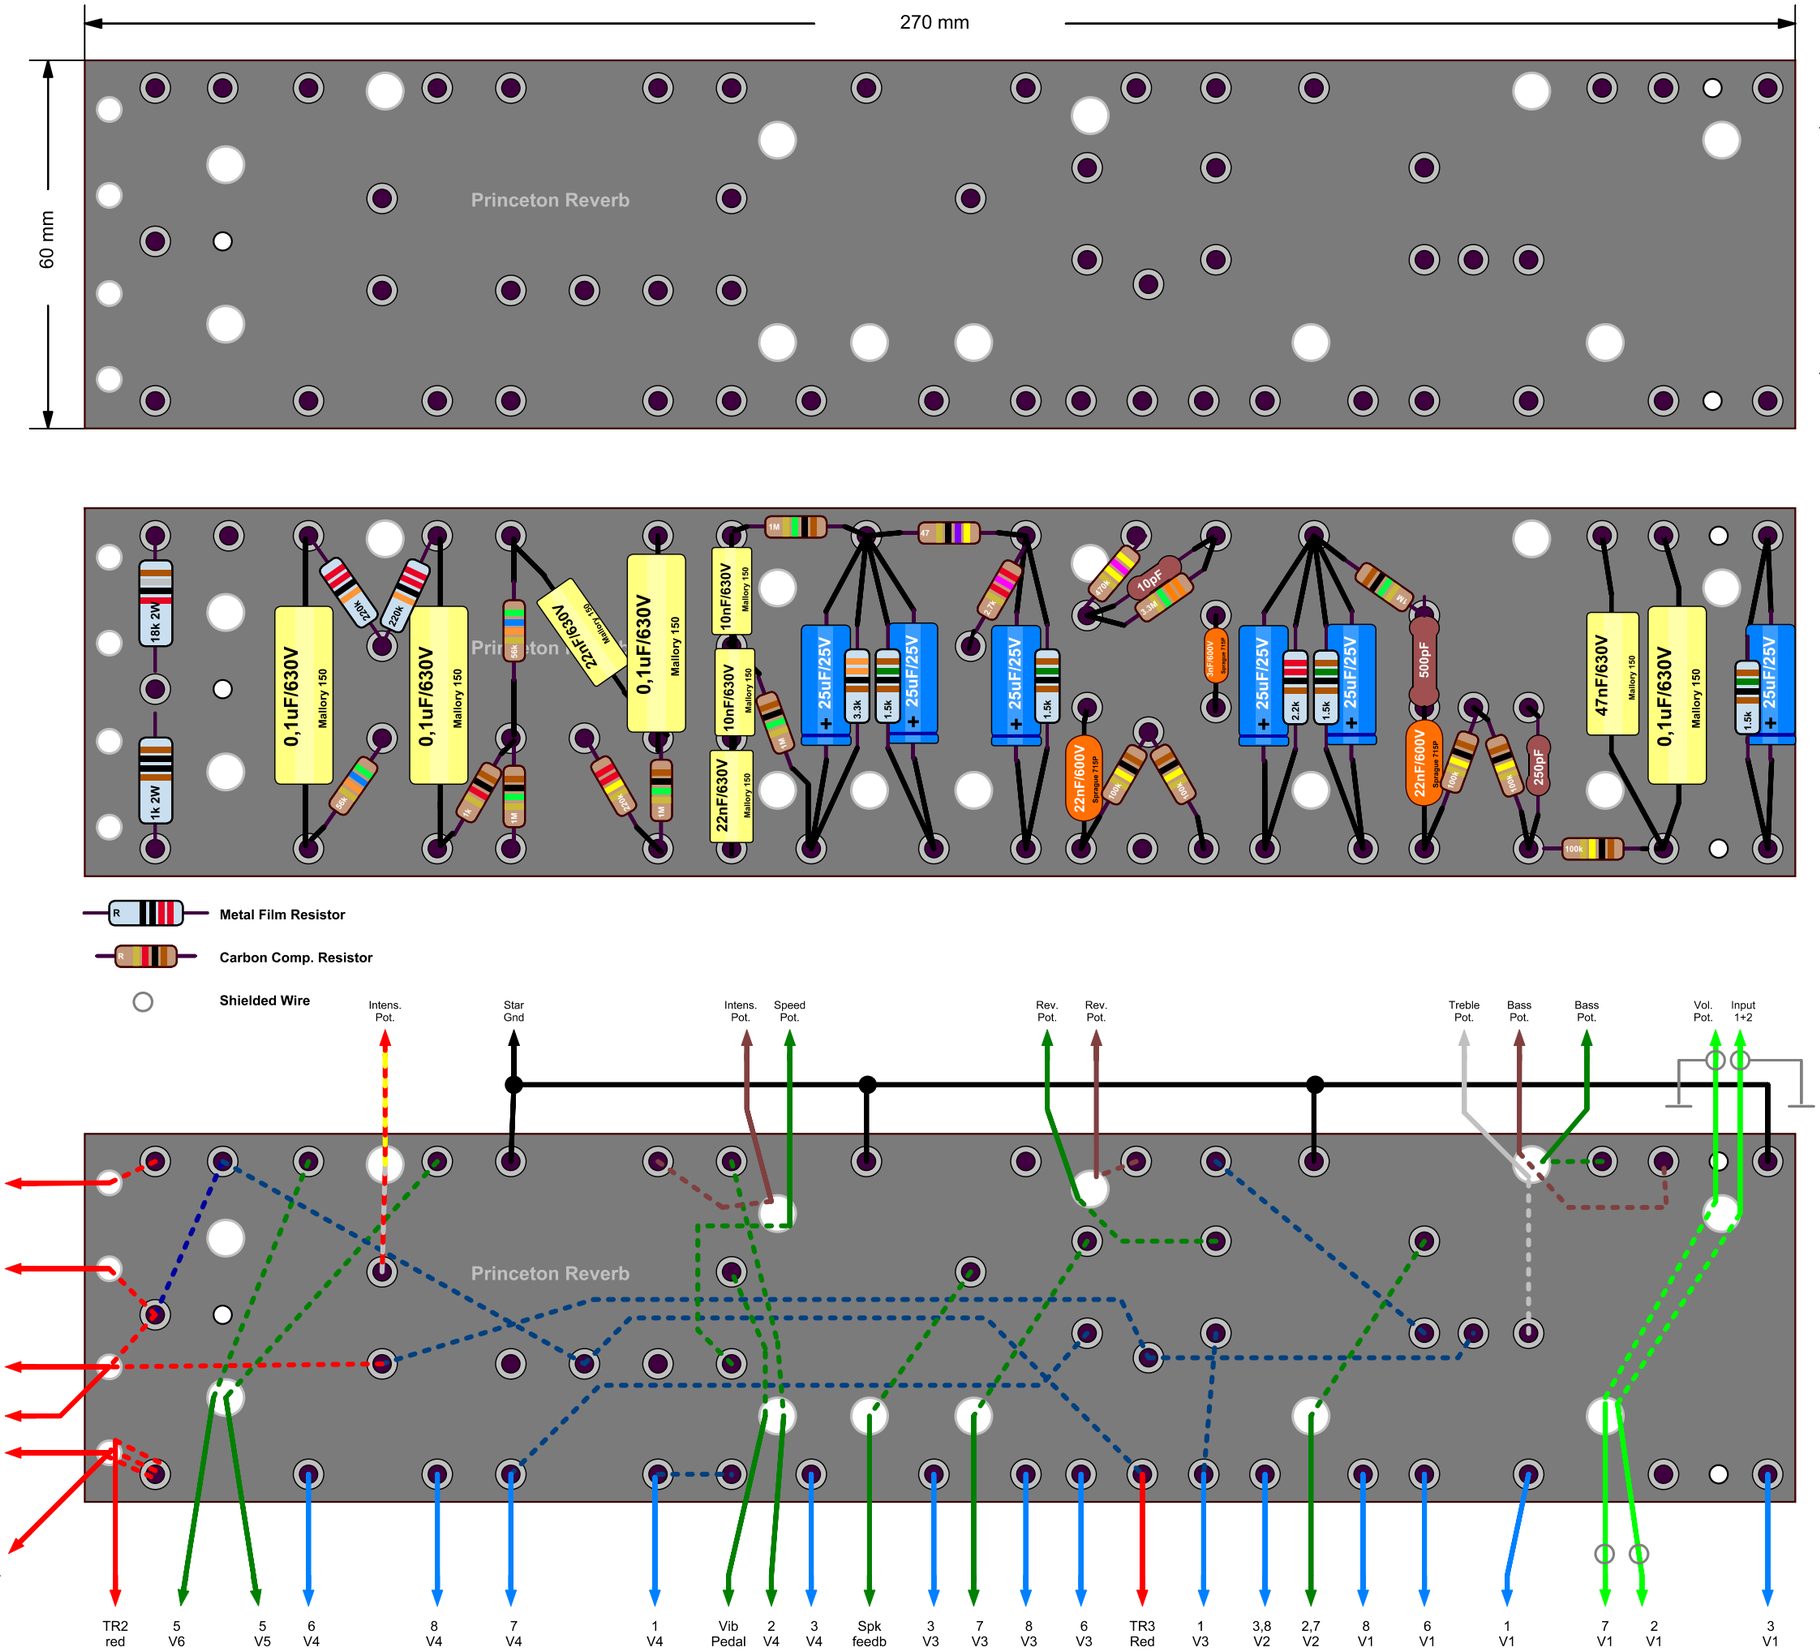


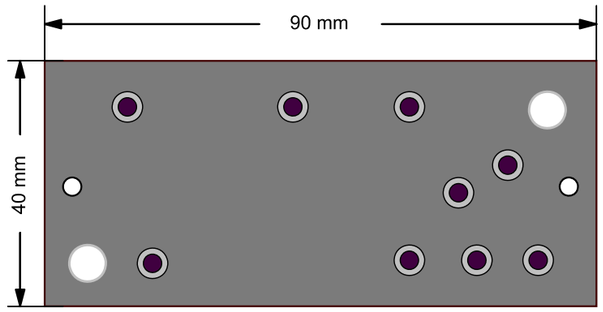

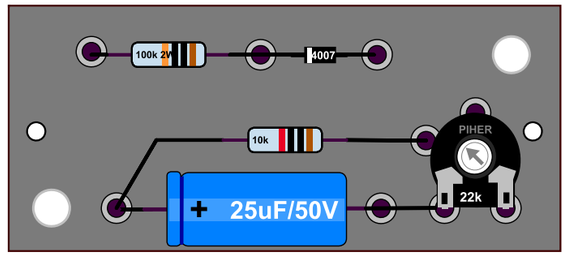

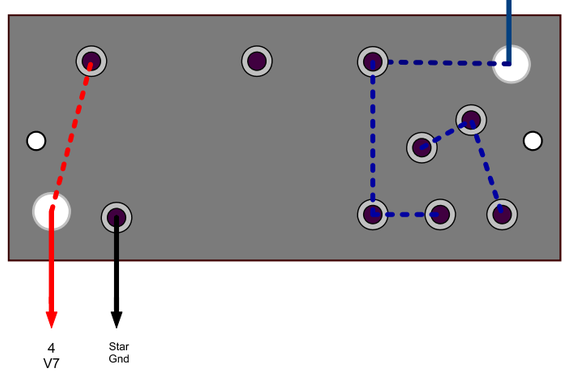

Princeton Reverb Amp Clone (AA1146)			
Sheet	Turret-Boards		
Code BB2008	Document princeton_reverb_docs.spl		Rev. A5
Date 11.12.2008	Last edit 00:44:22	Sheet 2 of 3	

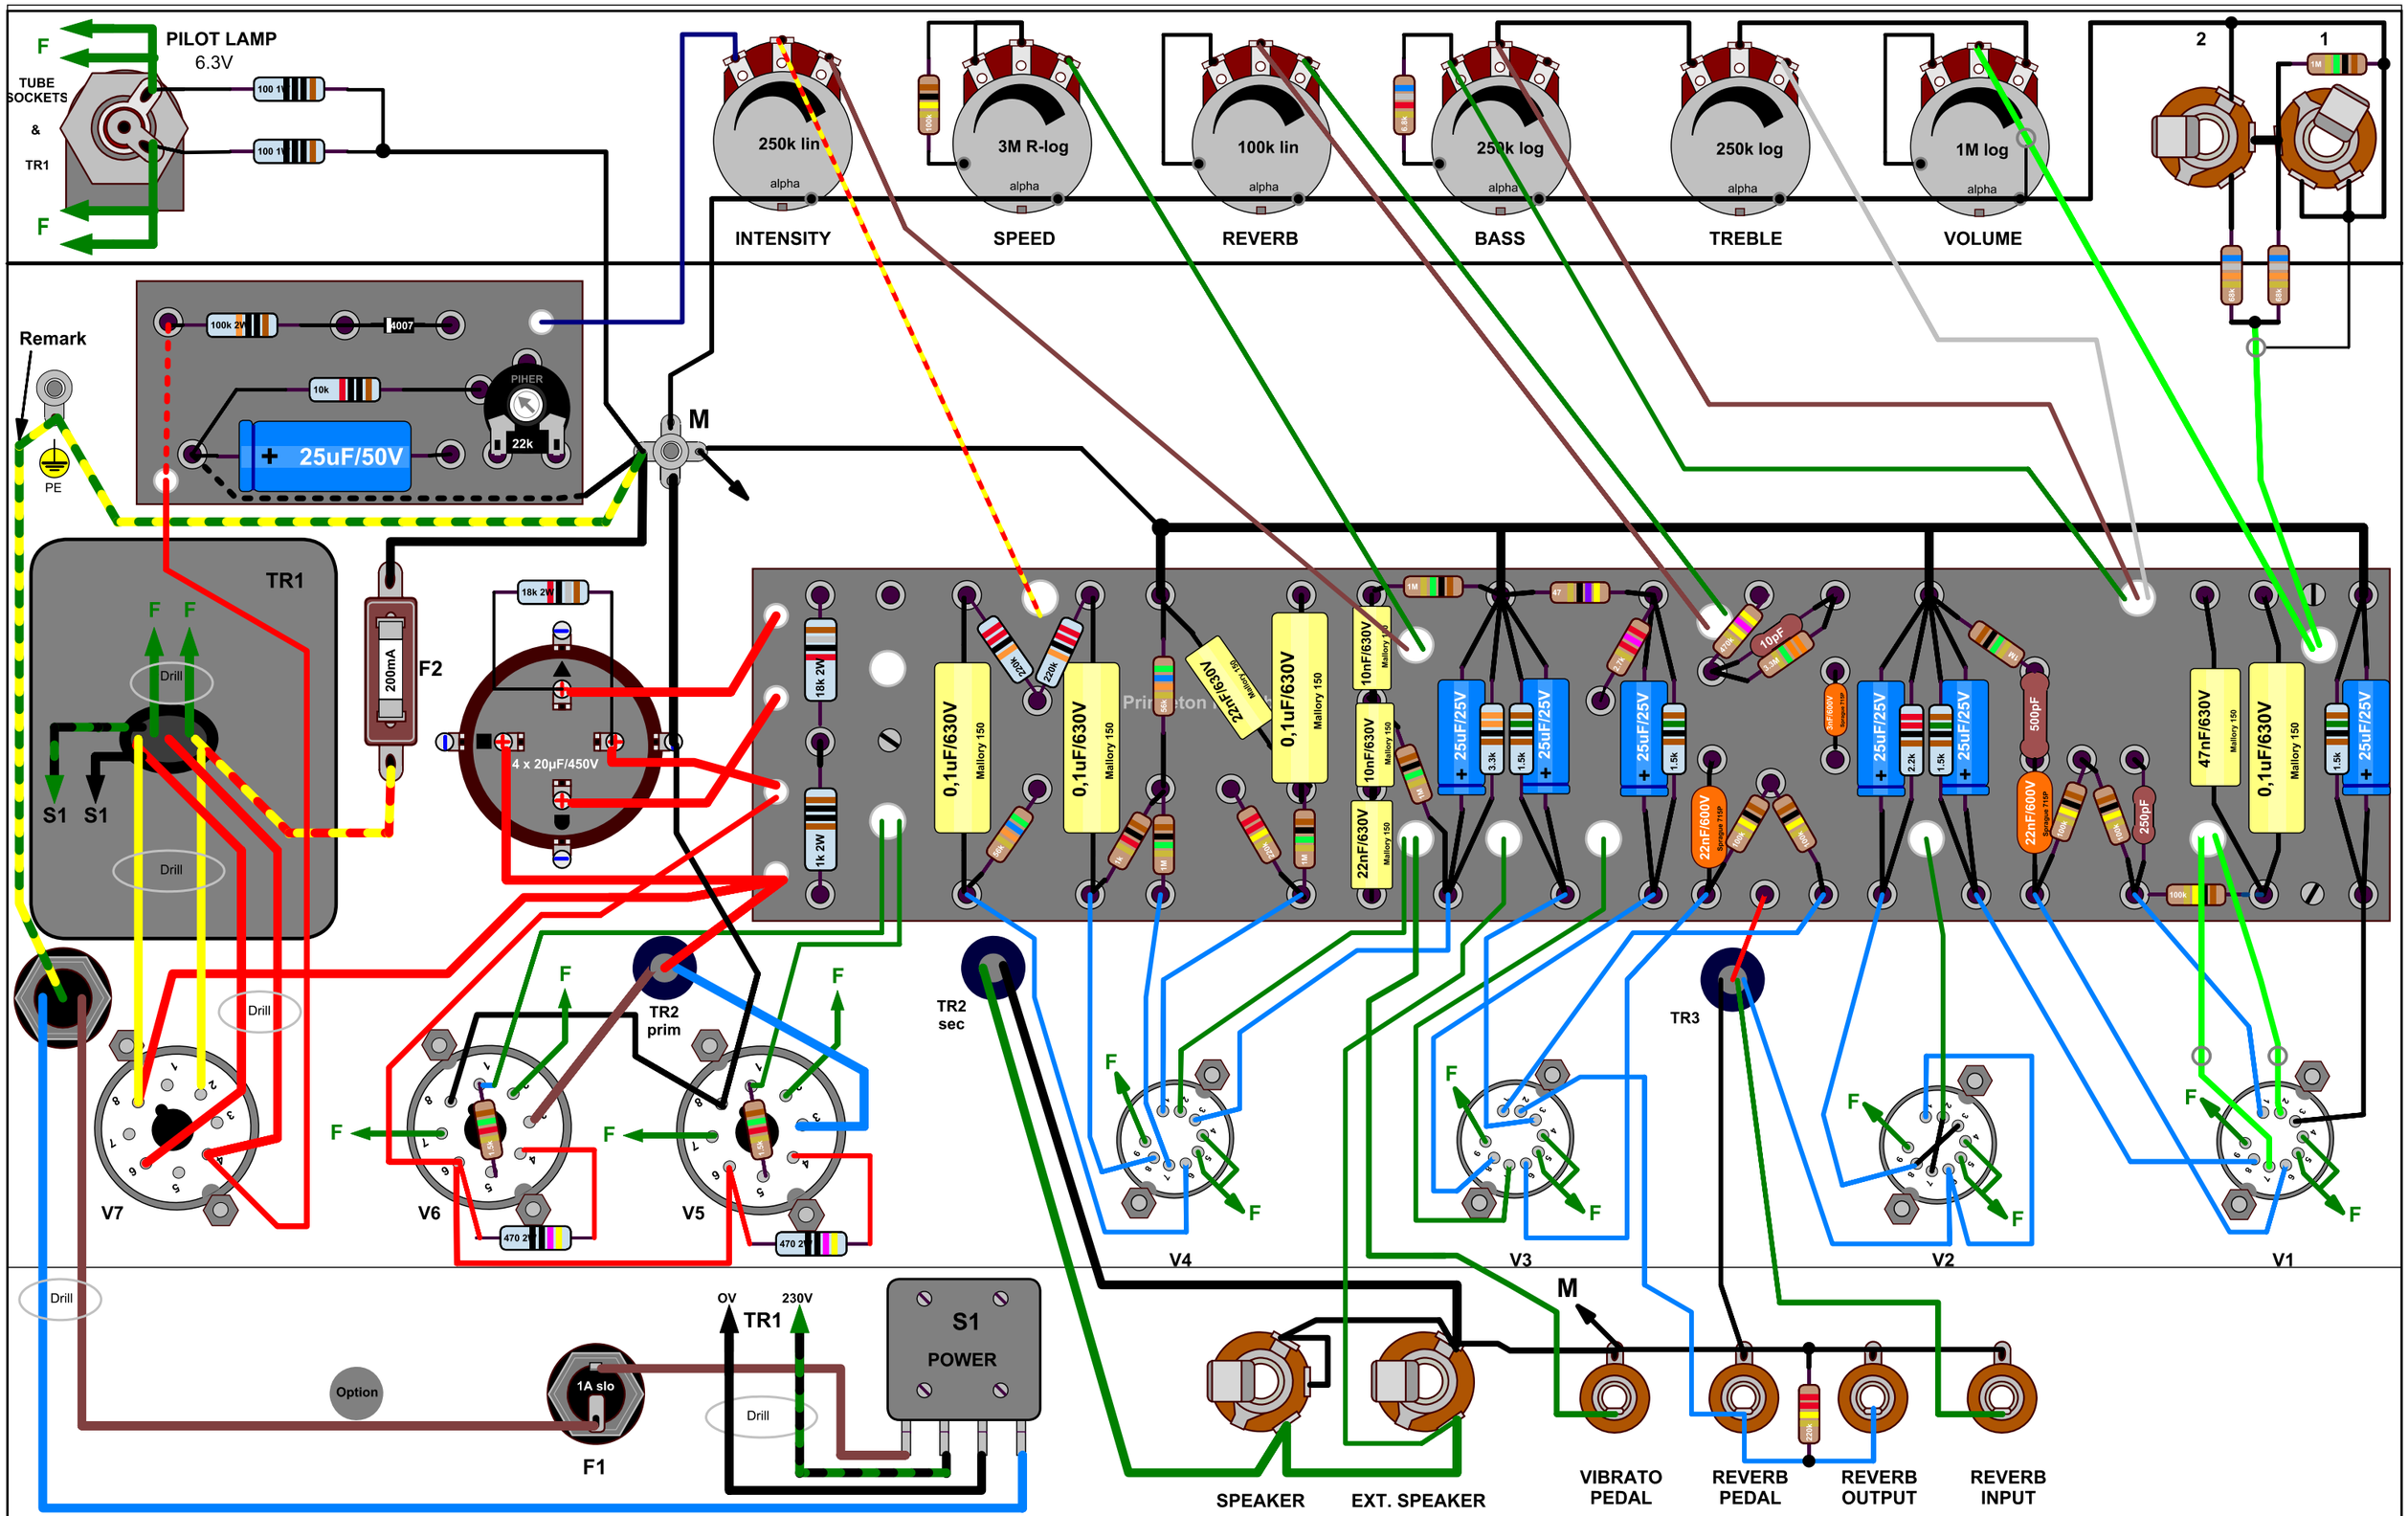

PICTURE SHOWS COMPONENTS FROM THE INSIDE OF CHASSIS.

REMARK:
FORM A SLOPE SO THAT PE-CONNECTION WILL BECOME THE LAST TO STRIP OFF IN CASE OF PULLING FORCE TO MAINS CABLE:

SOME RECOMMENDATIONS:

KEEP POWER WIRES AWAY FROM SIGNAL LINES. DRILL AC WIRES FIRMLY AND GIVE THEM SEPARATE WAY. PUT FILAMENT'S POWER WIRES WELL DRILLED ALONG THE INNER CHASSIS BEND AWAY FROM THE REST.
SIGNAL WIRES FROM INPUT SOCKETS TO V1 AND FROM V1 TO VOLUME POT SHOULD BE SHIELDED.
ALWAYS KEEP WIRES AS SHORT AS POSSIBLE.

Princeton Reverb Amp Clone (AA1146)			
Sheet	Physical Layout		
Code BB2008	Document princeton_reverb_docs.spl		Rev. A5
Date 11.12.2008	Last edit 00:44:24	Sheet 3 of 3	