
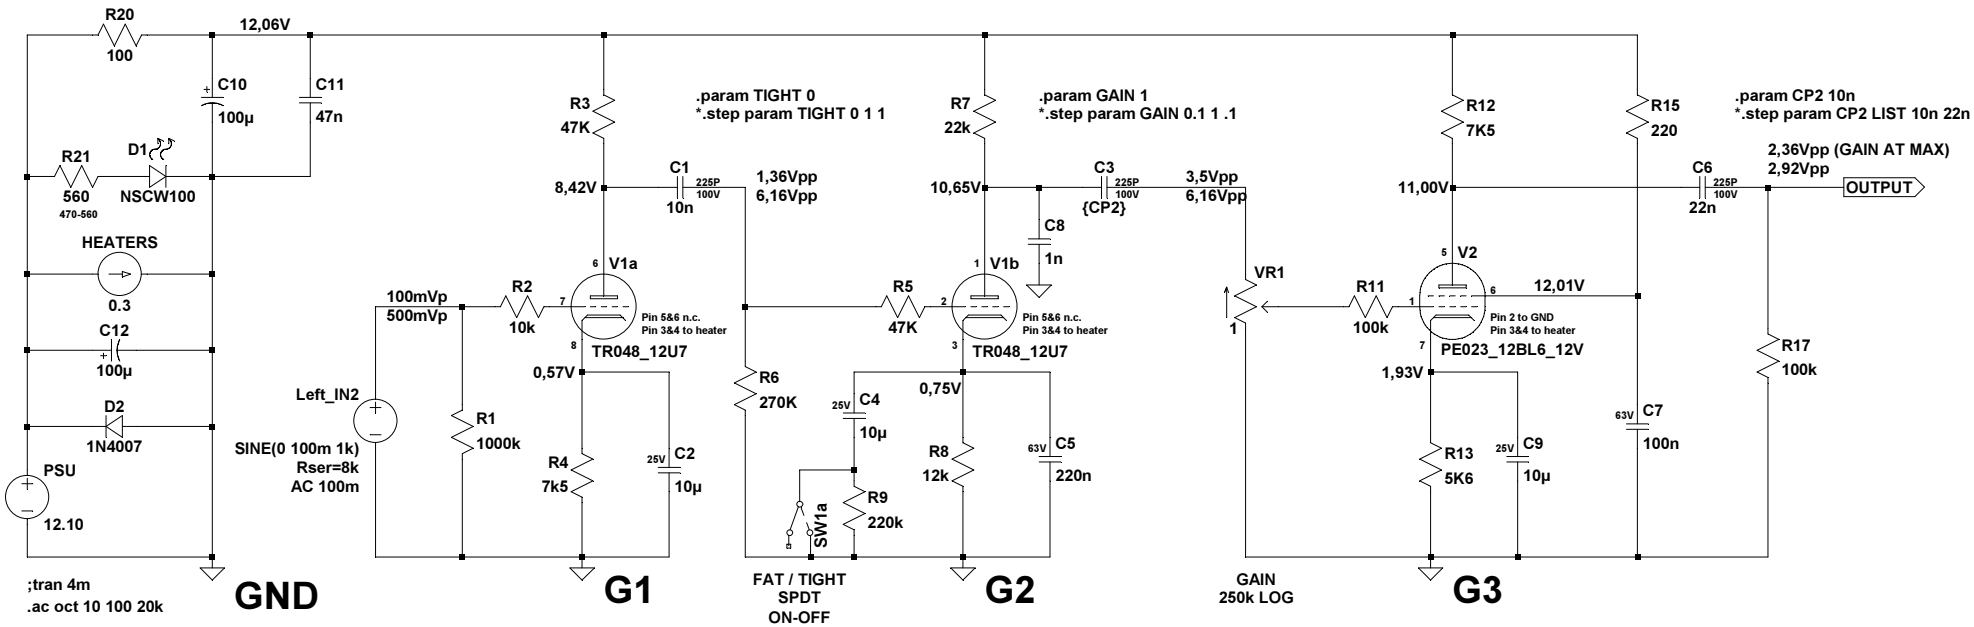


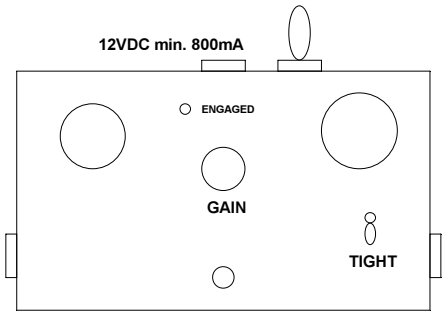

.param SIGNAL .8
*.step param SIGNAL 0.1 .9 .1
.param POTVAL 250k
*.step param POTVAL LIST 250k 500k

PROCEDURE:

1- FULL DRIVE FOR PENTODE (NO REDUCTION)

PROJECT: TUBE KICK		
DESIGN TITLE: Prototype - Cathode BIAS		
AUTHOR: Laurent	DRAWING NUMBER Drawing_nr	REV: VB3
DATE: 2015-07-28	SIZE: A4	SHEET: 1 of 1

--- E:\04-Divers\07- Perso\Guitare\Projects\#21-TubeKick-Booster_OLD\Tube-Preamp_VB3.asc ---